

# INSTALLATION INSTRUCTIONS

## Camera Bracket w/ Internal Coupler

### Tools Required:

5/32" Hex Bit Socket  
Torque Wrench

1. Insert the SE-4522 Internal Coupler into the SE-4524 Lower Arm and align the lower 3 holes of the coupler with the holes in the arm. Insert 3 of the supplied set screws through the holes in the arm into the coupler. Do not tighten at this time (Figure 1).
2. Slide the SE-4523 Upper Arm over the SE-4522 Internal Coupler and align the 3 holes of the coupler with the holes in the arm. Insert 3 of the supplied set screws through the holes in the arm into the coupler. Do not tighten at this time (Figure 2).
3. Align and adjust assembly as necessary. Torque all setscrews to 8-10 ft-lb.

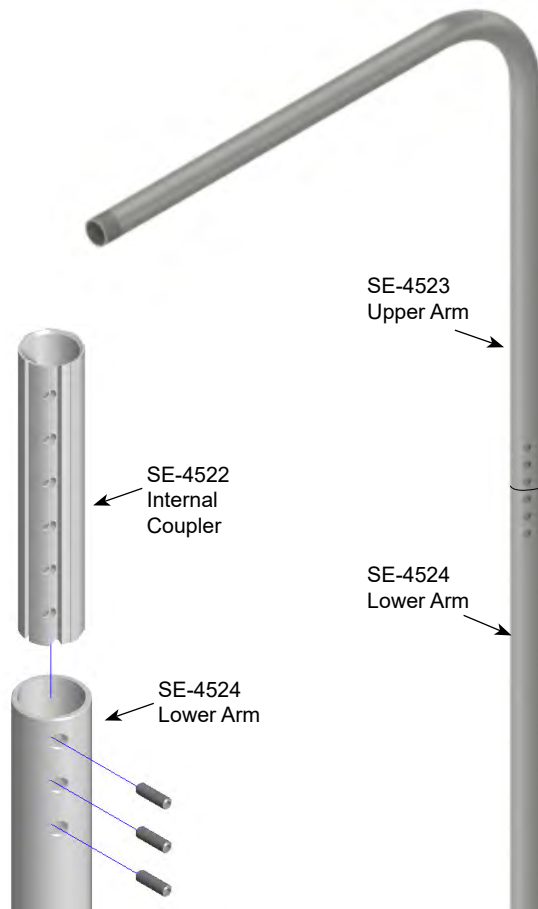


Figure 1

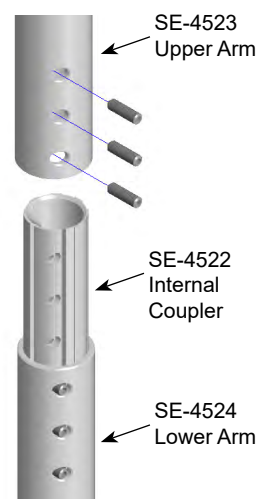


Figure 2