

INSTALLATION INSTRUCTIONS

PB-5115 Pedestrian Pole w/ Internal Coupler

Tools Required:

7/32" Hex Bit Socket
Torque Wrench

1. Insert the SE-4534 Internal Coupler into the PB-5113 Lower Pole and align the lower (3) holes of the coupler with the holes in the pole. Insert (3) of the supplied set screws through the holes in the pole into the coupler. Do not tighten at this time (Figure 1).
2. Slide the PB-5114 Upper Pole over the SE-4534 Internal Coupler and align the (3) holes of the coupler with the holes in the pole. Insert (3) of the supplied set screws through the holes in the pole and into the coupler. Do not tighten at this time (Figure 1).
3. Align and adjust assembly as necessary. Torque all setscrews to 30 ft-lb.

Note:

"No bolt" zone between 92" and 104" from ground.

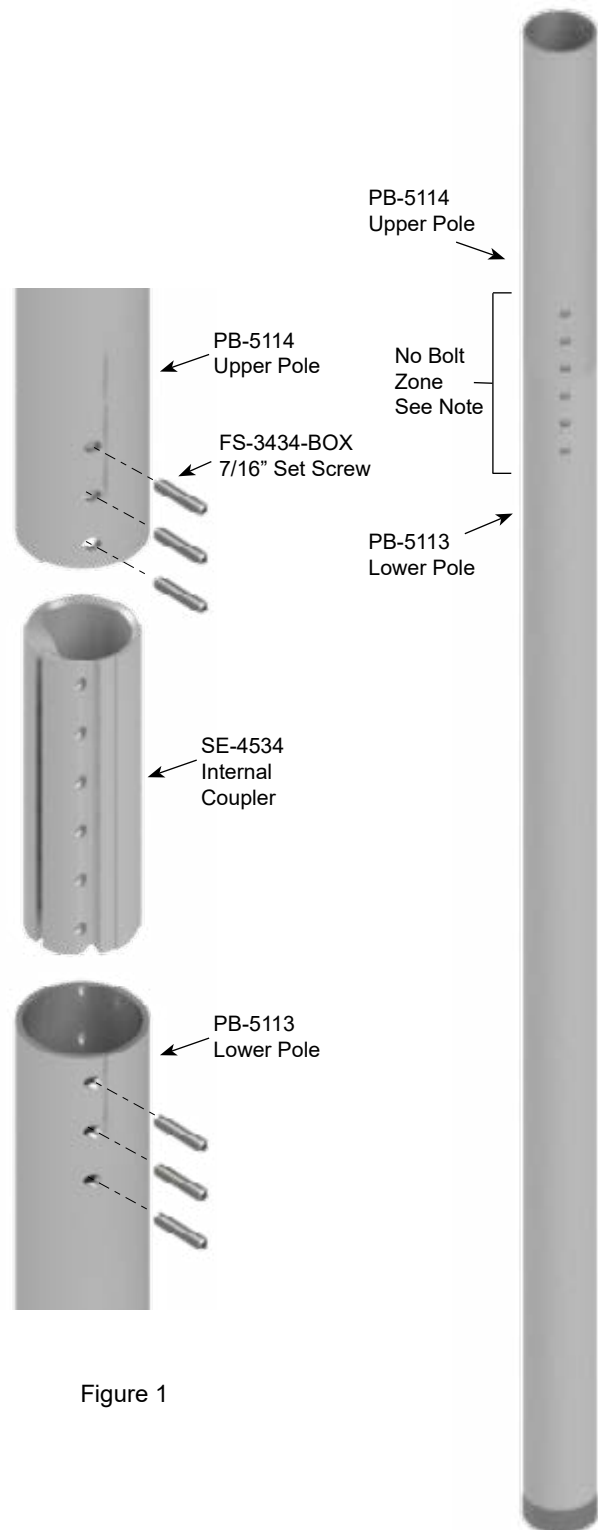


Figure 1